SMOKE ALARMS CENTRAL



BEEPING SMOKE ALARMS?

REASONS FOR ACTIVATED SMOKE ALARMS

- CONDENSATION
- BUGS AND INSECTS
- CANDLES AND INCENSE
- HIGH HUMIDITY
- EXCESSIVE SMOKE WHILE COOKING
- DUST PARTICLES
- AREOSOLS AND VAPORISERS

WHAT TO DO WHEN SMOKE ALARMS KEEP BEEPING?

If you can reach the smoke alarm, hold the test/hush button for 10 seconds, beeping will continue for another 20 seconds but will stop. If you are unable to reach the smoke alarm you can use a broom stick or another long object to push the button.

If beeping continues, establish which smoke alarm is setting off all other alarms. This can be identified by finding the alarm that is flashing red.

Once you have identified the problem alarm, deactivate this alarm to stop the beeping.

With a lithium smoke alarms twist it off the base and this will automatically unlink from the other smoke alarms on the property.

If it is a hardwired alarm you will either twist it off or there will be a latch to open it. Then remove the battery and leave the face off of the base of the alarm.

This will stop the beeping until a professional can attend and access the alarm.

AT SMOKE ALARMS CENTRAL WE HAVE A 24 HOUR CLIENT SUPPORT LINE

